


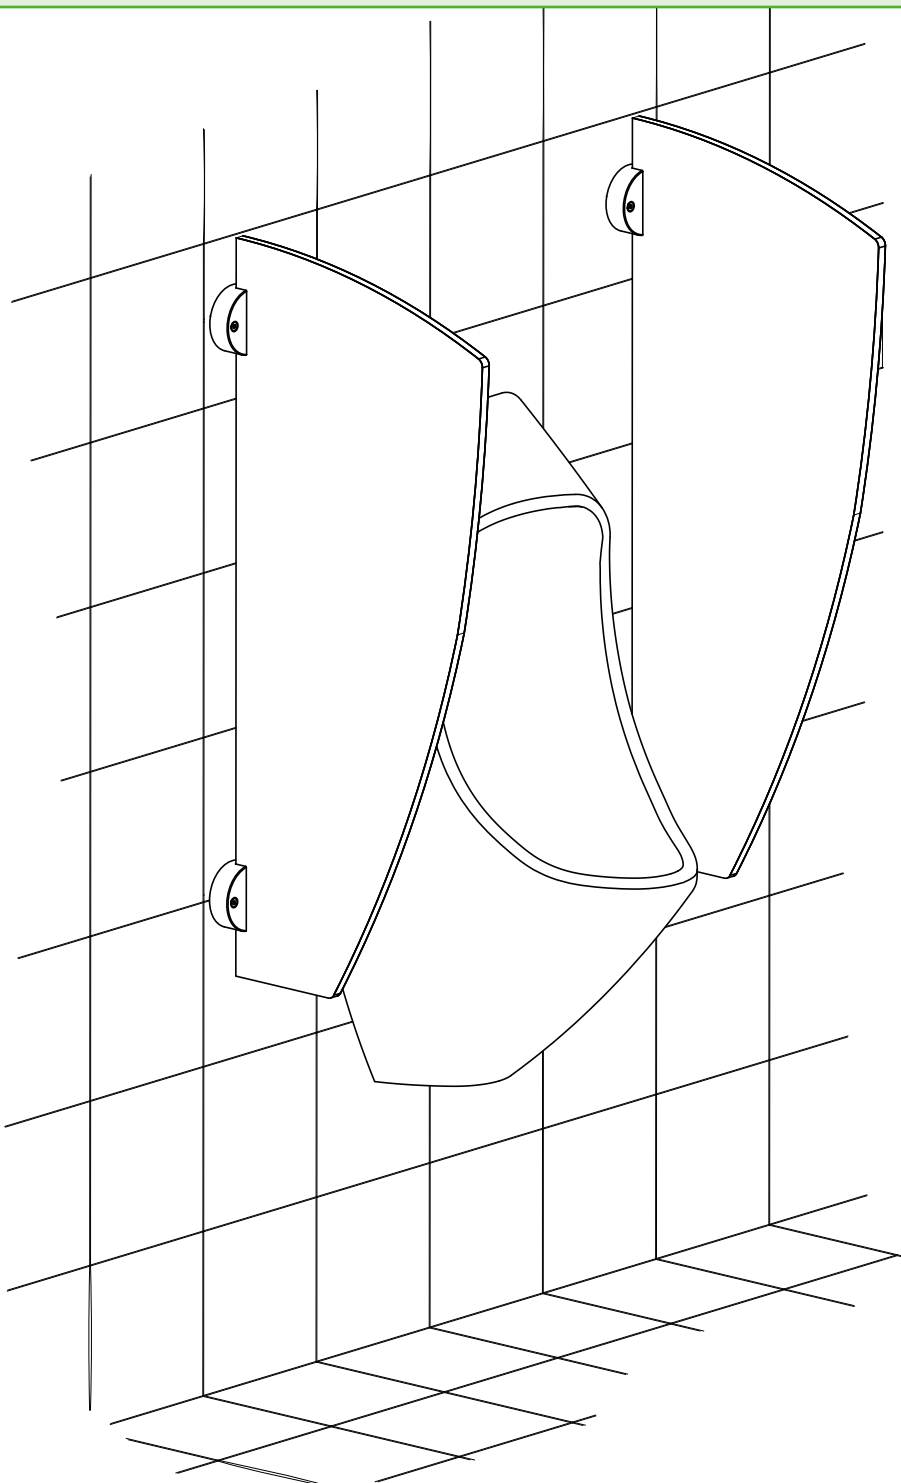


Installation instruction  
Installationsanleitung  
Instruction de l'installation  
Instrucción de instalación  
Instrução de instalação  
Istruzioni per l'installazione

**URIMAT** *urinal partition Trespa*  
*urinal trennwand Trespa*  
*urinoir partition Trespa*  
*urinarios separador Trespa*  
*urinóis paradores Trespa*  
*urinali separatore Trespa*


**Article:** 35.001




Supplied/Geliefert/Fourni  
Suministro/Fornecido/Fornito

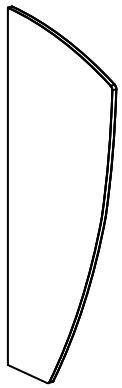


1 x Partition Board

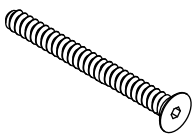

4x 6x80mm  
Coutersunk allen  
Wall screws




4x 8x50mm  
Dowel




4x 5x25mm  
Countersunk allen  
board screws



1

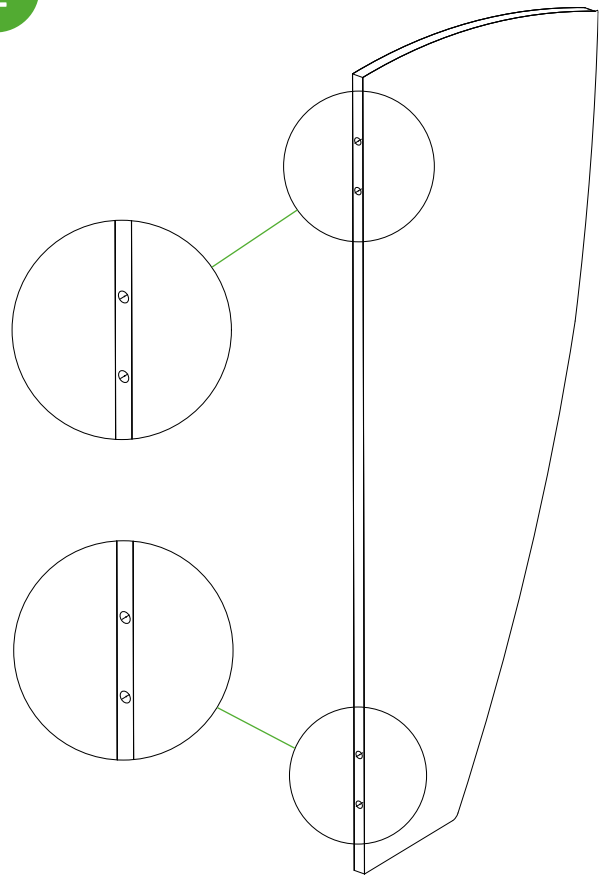


2

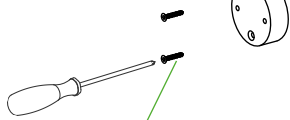


Lubricate screw  
5x25mm  
prior fastening

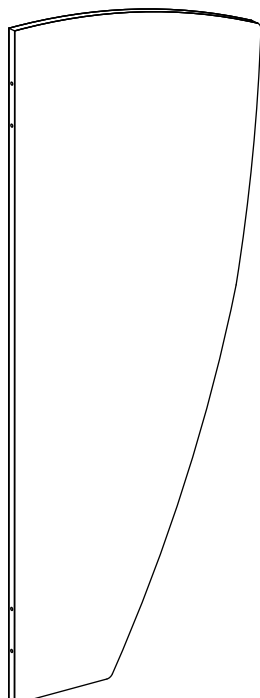


3

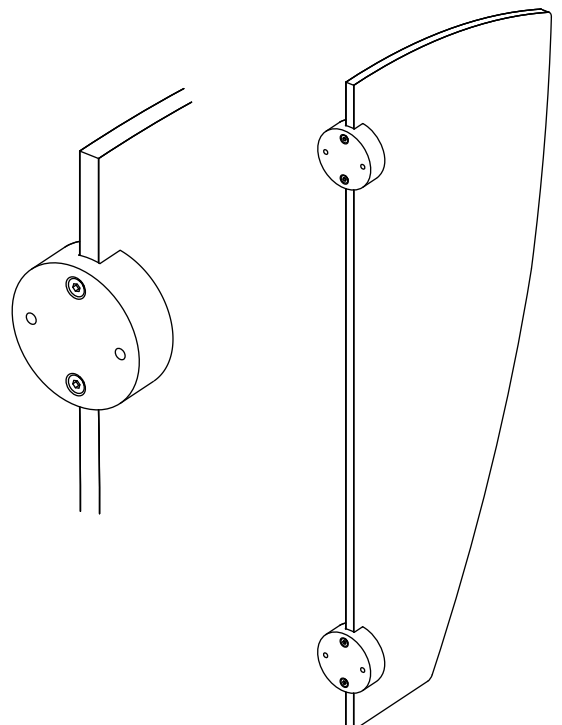


4

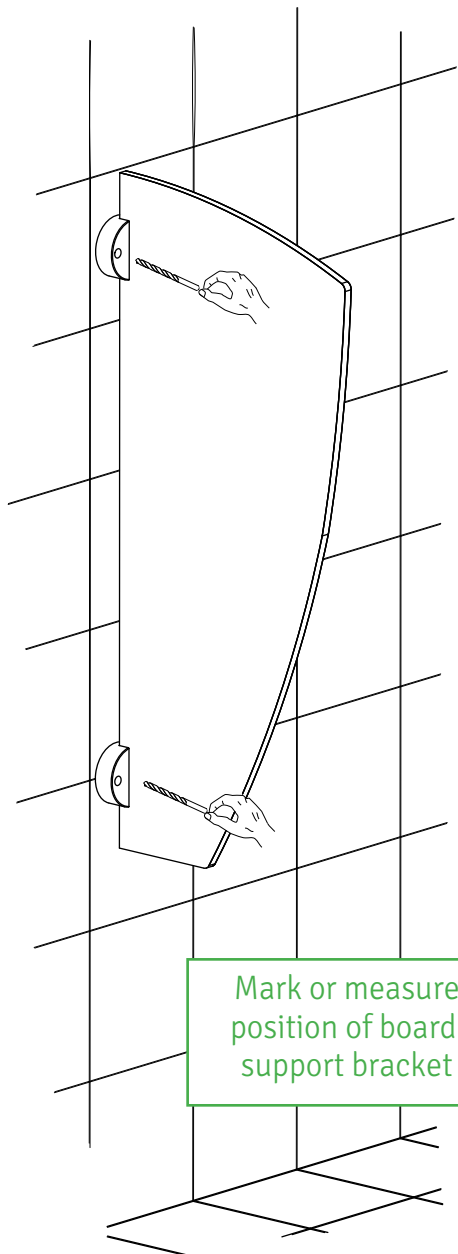

Mark or measure position of board support bracket

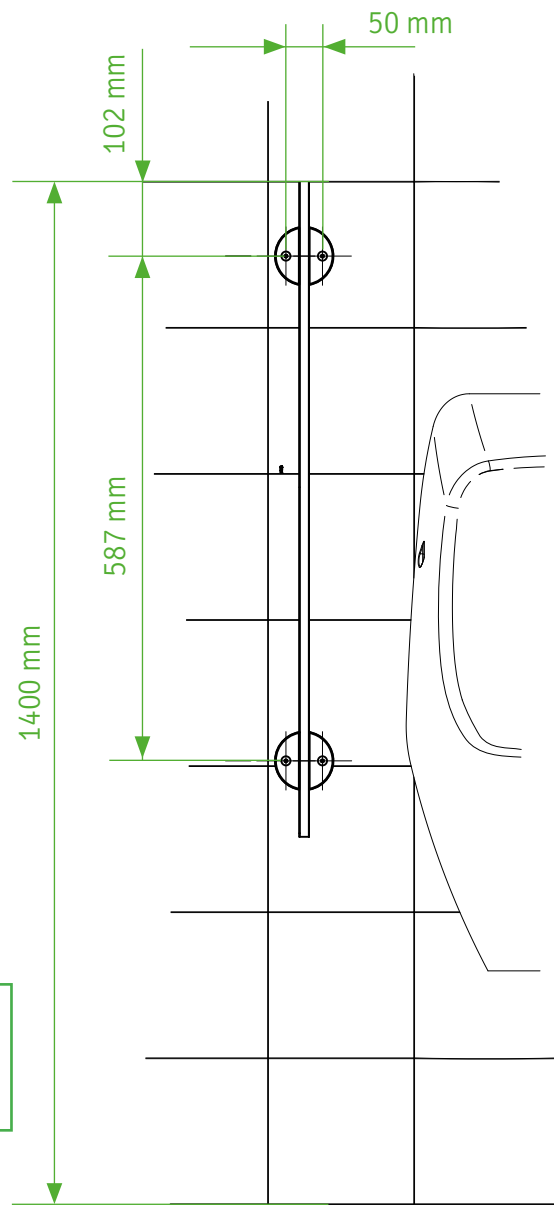


5

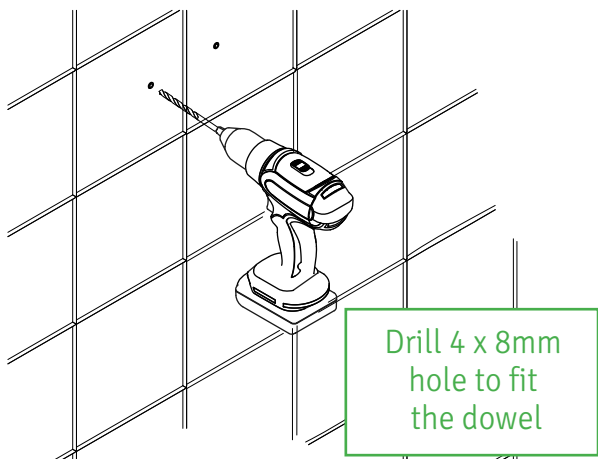

Drill 4 x 8mm hole to fit the dowel

6

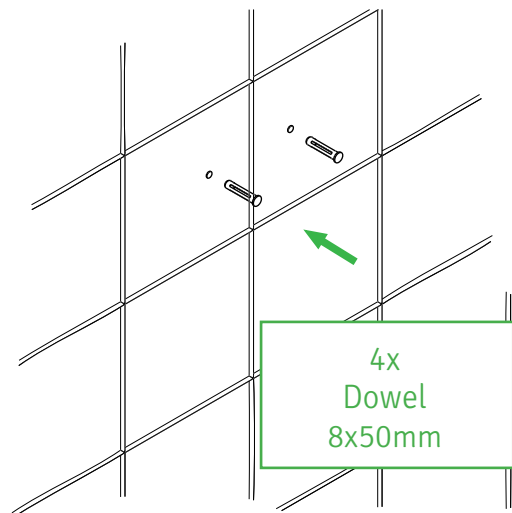

4x Dowel 8x50mm

7

